

See the full version: [Help] [GP32 Turns on LED, but not display or sound](#)

**double-h**

02/10/2009, 11:43

Good:

Well, I just turned on the gp32 with NEW batteries, and first with the rechargeable ones of the gp2x that were more than half ...

and the console lights the orange LED, but the screen does not make a sound .. any idea how to fix it?

leii long ago that might be the connector of the screen? but the sound would have to go right?

or I have to catch another T\_T

Greetings: toast:

**fosfy45**

02/10/2009, 11:51

Poof, sorry :(

If you can't fix it, sell it to me, I need parts.

Regards.

**double-h**

02/10/2009, 11:58

Now I have it open here, but I can't remove the front plate, if I don't fix it I'll catch one and if it's missing something I'll put it on mine, we'll talk later;)

<->

the stick how is it removed?

**fosfy45**

02/10/2009, 12:05

It seems to me that under pressure, and be careful with the connector from the screen to the board, it is very fragile.

**double-h**

02/10/2009, 12:21

nothing, I disassembled it all and checked the connectors and it remains the same T\_T

**martinbcn**

09/13/2010, 10:39

The same thing happens to me, is there a scheme or something to try to repair it?

**Karkayu**

09/13/2010, 13:42

In case you haven't seen it, here is a good tutorial to disassemble it:

<http://www.gp32spain.com/foros/showthread.php?t=63074>

a greeting

:toast:

**dimbo**

10/16/2013, 17:25

The same thing just happened to my dear gp32 blu, I'm all sad, any suggestions ?, or I can put it on the shelf of unwanted deaths.

Greetings.